


Your special memories and keepsakes are safe in your Secret Diary!

Your RadioShack My Secret Diary guards your private memories and stores your favorite things. The diary is locked and can only be opened by your password. You can keep your favorite photo of yourself on the cover.

INSTALLING BATTERIES

Your diary requires three AA batteries (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

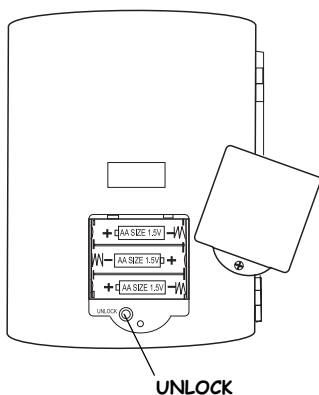

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or recharge-

My Secret Diary

OWNER'S MANUAL — Please read before using this equipment.

able), or rechargeable batteries of different capacities.


- If you do not plan to use the diary for several weeks, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

1. Use a Phillips screwdriver to loosen the screw from the battery compartment cover, then remove the cover.
2. Place the batteries in the compartment as indicated by the polarity symbol (+ and -) marked inside.
3. Replace the cover and tighten the screw.

Notes:

- When the sound becomes low, or the game stops operating properly, replace the batteries.
- Removing the batteries clears your password. You must input the password again. See "Setting up Your Diary" on Page 2.

SETTING UP YOUR DIARY

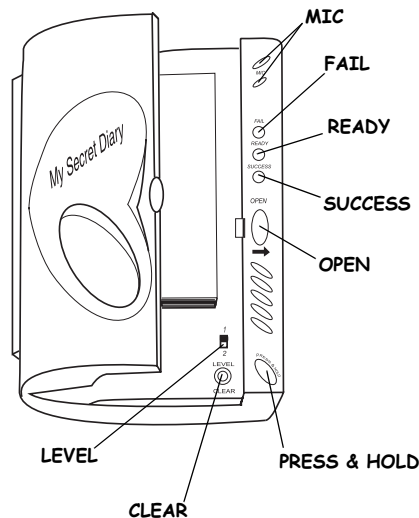

Before using your diary, you must record a password, install a photograph of yourself, and choose a password recognition level.

Note: To ensure that the diary accepts your password, be sure to find a quiet place to record your password.

1. Use a Phillips screwdriver to loosen the screw from the battery compartment cover, then remove the cover.
2. Set the recognition level. If you want your password to always be accepted, slide **LEVEL** to 1.

If you want your password to be more secure, slide **LEVEL** to 2. You must now say your password at the precise speed and volume as your recording.

3. Hold down **UNLOCK**, then slide **OPEN** to the right to open the cover.
4. Hold down **PRESS & HOLD**. The yellow **READY** indicator flashes. The diary asks you to record your password and beeps twice. The yellow indicator turns on.

Note: Do not release **PRESS & HOLD** until the green **SUCCESS** indicator lights.

5. Within 2 seconds, say your password from as close as possible into **MIC** at the top of the diary.

After a few seconds, the diary tells you the password is accepted and the green **SUCCESS** indicator turns on.

If the diary cannot hear your password, it asks you to say your password again, and the red **FAIL** indicator flashes. Say your password again.

6. After recording your password, try to enter your password while the cover is still open.

If your password is not accepted, there was probably an error in recording.

To re-record your password, press **CLEAR** to clear your password, then repeat Steps 4–5 to record again.

7. On the inside of the cover, turn all the tabs holding the rectangular plate so that you can lift the plate out of its frame.
8. Cut your photo to the size of the plate, and place the photo facedown in the frame. Place the plate on top of the photo.
9. Turn the tabs to secure the plate, then close the diary.

OPENING THE DIARY

When you close the diary, it locks. You must enter your password to open it.

1. Hold down **PRESS & HOLD**. The yellow **READY** indicator flashes and the diary says "Password please," then beeps twice. The yellow **READY** indicator turns on.

2. Within two seconds after the beeps, say your password into MIC.
3. If your password is correct, the green SUCCESS indicator turns on, a tone sounds, and the diary tells you your password has been accepted (see "Voice Messages").
4. When the SUCCESS indicator flashes, slide OPEN to the right. You hear a click as the diary cover unlocks.
5. If your password is incorrect, the red FAIL indicator flashes and tells you your password has not been accepted (see "Voice Messages"). The cover remains locked.

When the SUCCESS indicator turns off, the diary is locked again.

Note: Your password might not be accepted even though it is correct because:

- You said the password faster or slower than the recorded password. Say the password again at the correct speed.
- You started recording too early or too late relative to the beeps. Say your password again just after the beeps.
- Your voice is unclear or too soft. Move closer to the microphone and speak louder.
- Your environment is too noisy. Try again in a quiet environment.

Note: If you forget the password and want to open the diary, you can open it manually by repeating Steps 1 and 3 of "Setting up Your Diary" on Page 2.

Voice Messages

When your password is correct, you hear one of the following voice messages:

- *Hurray! You get it. Pull the button to open the diary.*

- *Yeah! You get it. Pull the button to open the diary.*

When your password is incorrect, you hear one of the following messages:

- *Oops! Password is not correct. Try again (or once again).*
- *Repeat your password louder.*
- *Oh, I can't hear. Once again (or try again).*

After three incorrect attempts, you hear the voice message:

- *Access denied, who are you?*

The diary keeps track of how many times a failed password is entered. After you enter a correct password, the diary tells you how many intruders have attempted access. You hear:

- *One (up to five) intruder(s). Welcome back!*

If a failed password is entered more than five times, when you successfully open the diary it greets you with this message:

- *Intruder access. Welcome back!*

If no failed passwords have been entered, you hear this message:

- *Welcome back!*

Changing Your Password

To change your password at any time, open the diary, press CLEAR, then re-record a new password.

Resetting the Diary

If the diary does not accept your password during recording, remove the batteries. Wait 10 seconds, then replace the batteries. The diary is reset and your password is cleared.

CARE

Keep the diary dry; if it gets wet, wipe it dry immediately. Use and store the diary only in normal temperature environments. Handle the diary carefully; do not drop it. Keep the diary away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the diary's internal components can cause a malfunction and invalidate its warranty. If your diary is not performing as it should, take it to your local RadioShack store for assistance.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

RadioShack Corporation
Fort Worth, Texas 76102

60-1203
06A00
Printed in Hong Kong